

TOUCH OF ECO™

INSTRUCTIONS CLIPON SOLAR CLIP LIGHT

PARTS CONTAINED:

- Solar panel with clamp
- Rechargeable Battery Installed
- Instruction manual

TO CHARGE THE CLIPON USING THE SOLAR PANEL:

Prior to initial use, please expose the clip light to direct sunlight for at least 8 hours with the switch "ON", so that the battery is fully charged.

- To turn light to "ON" position, push rubber button located on the bottom panel.
- Adjust light to desired angle.

IMPORTANT:

Please note that the light is designed to work in the dark. If there are strong light sources nearby then the lamp maybe very dim or not work at all. Although the manufacturer has charged the battery, the charge levels will have dropped when you receive it. Please charge it for a full day to optimize performance. The surface of solar panel must be kept clear, if not, this will influence the efficiency of charging.

MAINTENANCE:

If your solar light does not turn on automatically at dusk, check the followings:

Make sure the battery is fully charged:

1. Checking the location and position of the of solar panel so it receives maximum direct sunlight.
2. In cloudy or rainy days, the battery cannot get sufficient power supply in daytime. It needs to be fully charged in a sunny day.

Keep away from other light sources:

1. If the solar light is placed near other lights, such as streetlights, corridor-lights etc., the inset sensor automatically acts to keep the solar light off.
2. In this case, you may either turn off the adjacent lights or move the solar light away from them.

Still not working:

1. Having done all the above, check the solar light itself at night or in a dark room. If the clip light gives light but doesn't last long, this suggests insufficient power storage.
2. Turn the switch button to "ON" and allow the solar light to be fully charged under direct sunlight for at least 8 hours. Keep the light in the "ON" position, so that the light will work at night.

IMPORTANT:

Please note that the light is designed to work in the dark. If there are strong light sources nearby then the lamp maybe very dim or not work at all. Although the manufacturer has charged the battery, the charge levels will have dropped when you receive it. Please charge it for a full day to optimize performance. The surface of solar panel must be kept clear, if not, this will influence the efficiency of charging. Duration of light depends on solar product's level of sunshine exposure, geographical locations, weather conditions, and hours of sunlight.



INSTRUCCIONES

Clip De La Luz Solar

Partes contenidas en el paquete:

- Panel solar con abrazadera
- Baterías recargables preinstaladas
- Manual de instrucciones

CLIPON Para cargar:

Antes del uso inicial, por favor exponga el clip a luz solar directa durante al menos 8 horas con el interruptor en "ON", para que la batería sea completamente cargada.

- Encienda la luz a "ON" pulsando el botón de goma ubicado en el panel inferior.
- Ajuste la luz al ángulo deseado.

Importante:

Antes de su uso inicial, por favor coloque el panel solar en luz solar directa durante al menos 24 horas. Esto cargará completamente la batería y garantizará un rendimiento óptimo. Recomendamos colocar esta luz lejos de fuentes de iluminación intensa como farolas o lámparas, ya que afectan el rendimiento de estas luces. La duración de la luz depende del nivel exposición solar del producto, ubicación geográfica, condiciones climáticas y horas de luz solar.

LIMITED WARRANTY

New Product Solutions and Touch Of ECO warrants to the original consumer purchaser that this Touch Of ECO product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified on www.touchofeco.com, subject to the exclusions set forth below. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sales of our products.

LIMITED TO ORIGINAL CONSUMER BUYER

The warranty on Touch Of ECO products is limited to the original consumer purchaser and is not transferable to any subsequent owner.

EXCLUSIONS

Touch Of ECO warranty does not apply to (i) any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Touch Of ECO's then-current product literature, or (ii) any product purchased through an online auction house. Power and strength of LED's will vary and is dependant upon both region and product placement.

IMPLIED WARRANTIES

THE LIMITED WARRANTY STATED HEREIN IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IN NO EVENT SHALL ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, EXTEND BEYOND THE APPLICABLE WARRANTY PERIOD IDENTIFIED ON WWW.TOUCHOFECO.COM. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

EXCLUSIVE REMEDY; LIMITATION OF LIABILITY

The foregoing provisions state TOUCH OF ECO's entire liability, and your exclusive remedy, for any breach of warranty, express or implied. IN NO EVENT WILL TOUCH OF ECO BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM ANY USE OR MALFUNCTION OF ANY TOUCH OF ECO PRODUCT, OR FROM ANY BREACH OF WARRANTY, INCLUDING DAMAGE TO OTHER DEVICES. IN NO EVENT WILL TOUCH OF ECO'S LIABILITY FOR ANY CLAIM, WHETHER IN CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR UNDER ANY OTHER THEORY OF LIABILITY, EXCEED THE AMOUNT PAID BY YOU FOR THE TOUCH OF ECO PRODUCT.



Got Questions? info@touchofeco.com
4401 DIPLOMACY RD. FORT WORTH, TX 76155

DISTRIBUTED BY:

**NEW PRODUCT
SOLUTIONS™**

MADE IN CHINA